

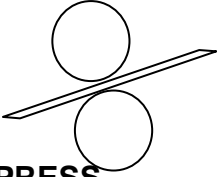






# UNDERPADS- Laundering Recommendations

 <b>WASHING</b>	Pre-Rinse (x1) Detergent (x1) Post-Rinse (x2-3) Sour (x1) <b>DO NOT</b> use Softener	Water temperature: 160°F Alkalinity ppm: 200 – 400ppm Alkalinity pH: 10 – 10.5pH Final Rinse pH: 5.5 – 6.5pH
 <b>LIMITED BLEACH</b>	Bleach (x1)	Water temp: 160°F Bleach ppm: 50 – 200ppm Chlorine pH: 10.2 – 10.8pH Peroxide pH: 10.5 – 11.2pH Peroxide temp: 165°F
 <b>PRESS</b>	Use a 2 stage press to remove excess water. Set the press to 9 bars for stage 1. Then set the press to 30 or 32 bars for stage 2	
 <b>LIMITED DRYING</b>	Tumble Dry – <b>MAX</b> 160°F	
 <b>NO IRONING</b>	<b>DO NOT</b> flat-work iron	

**All Products**      Must be laundered prior to use  
Only wash with like items  
Only wash with like colors

**Chemicals**      Quantity will vary with machine size and type  
Confirm with your chemical vendor for correct quantity

**DO NOT** Use Fabric Softener. Fabric softener inhibits absorbency / wicking

**DO NOT** Overdry. Overdrying can lead to melting / hardening, sheen, static and permanent creasing